


Intake Air Temperature Sensor - Removal

WARNING

Before starting work, ensure the motorcycle is stabilised and adequately supported. This will help prevent it from falling and causing injury to the operator or damage to the motorcycle.

- Remove the seat (see [Seat - Removal](#)).
 - Disconnect the battery, negative (black) lead first (see [Battery - Removal](#)).
1. Disconnect the electrical connector from the sensor.
 2. Remove the fixing and remove the sensor from the airbox.

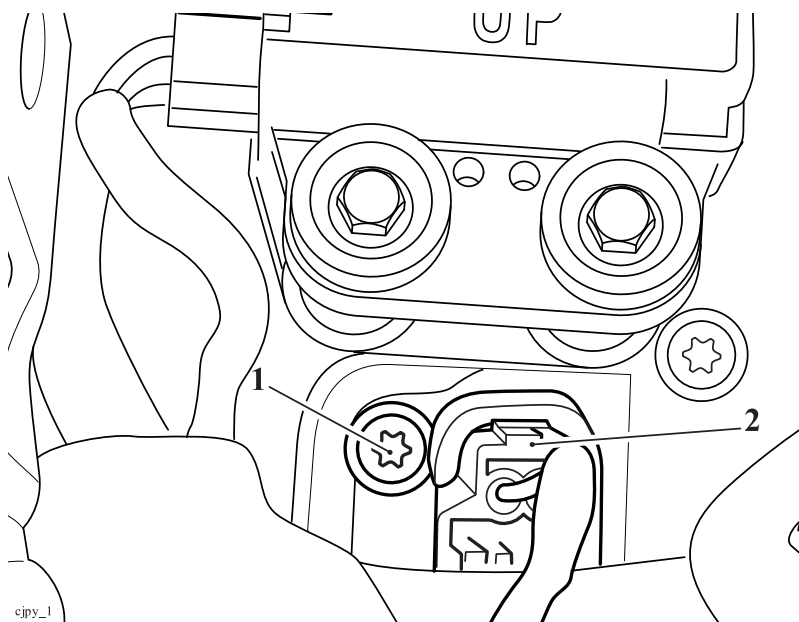

1. Fixing
2. Electrical connector