


## Purge Control Valve (if fitted) - Removal

### WARNING

Before starting work, ensure the motorcycle is stabilised and adequately supported. This will help prevent it from falling and causing injury to the operator or damage to the motorcycle.


- Remove the seat (see [Seat - Removal](#)).
  - Disconnect the battery, negative (black) lead first (see [Battery - Removal](#)).
  - Remove the left hand side panel (see [Side Panels](#)).
1. Remove the fixing and remove the air intake duct on the left hand side of the airbox.

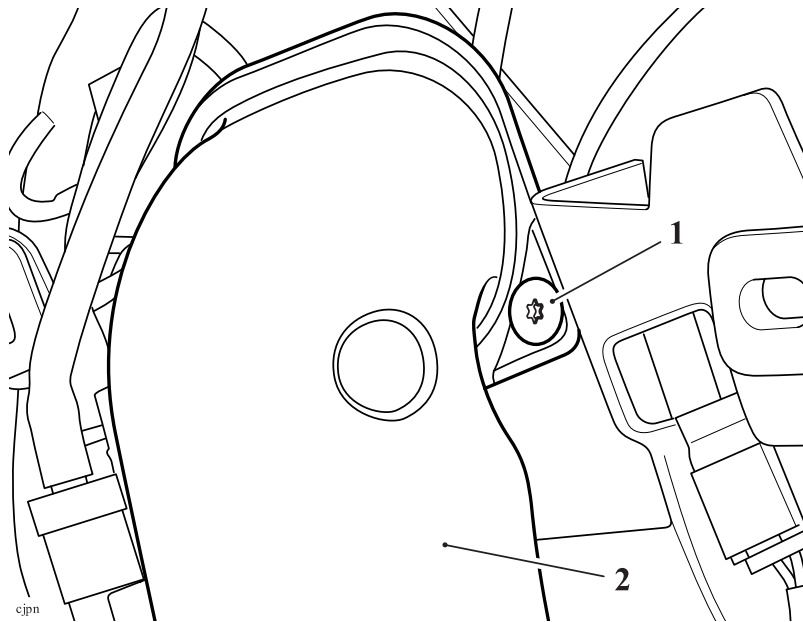

1. Fixing
2. Air intake duct

### Note

- **Note the position and orientation of the purge control valve and its bracket for installation.**
2. Remove the fixing and detach the roll over valve and the purge control valve bracket from the airbox.
  3. Detach the purge control valve from the bracket.
  4. Detach the upper and lower hoses and remove the purge control valve.

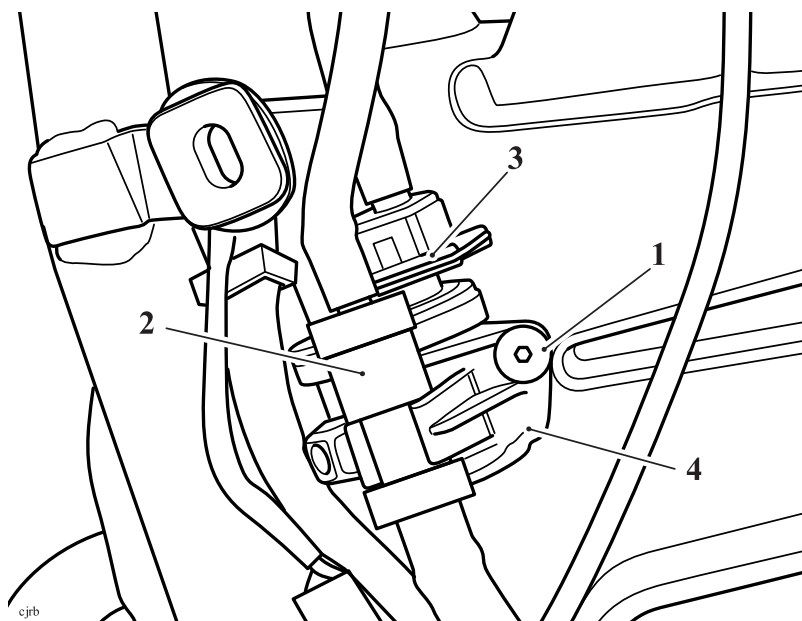

1. Fixing
2. Roll over valve
3. Purge control valve
4. Bracket

5. Press the wire locking device fully in and disconnect the electrical connector from the purge control valve.