


Rear Mudguard - Removal

WARNING

Before starting work, ensure the motorcycle is stabilised and adequately supported. This will help prevent it from falling and causing injury to the operator or damage to the motorcycle.


- Remove the seat (see [Seat - Removal](#)).
 - Disconnect the battery, negative (black) lead first (see [Battery - Removal](#)).
1. Disconnect the rear light harness from the main harness.
 2. Remove the engine ECU (see [Engine Electronic Control Module \(ECM\) - Removal](#)).
 3. Remove the two front fixings and flanged sleeves from the underside of the rear mudguard.

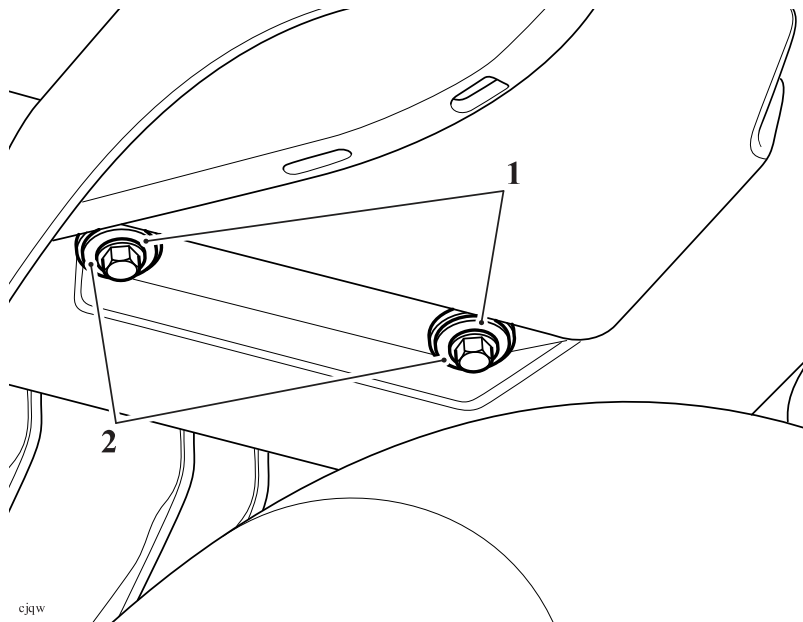

1. Fixings
2. Shouldered washers

Note

- **Note the routing of the harnesses for installation.**
4. Remove the four rear fixings and flanged sleeves from the rear mudguard and carefully remove the mudguard.

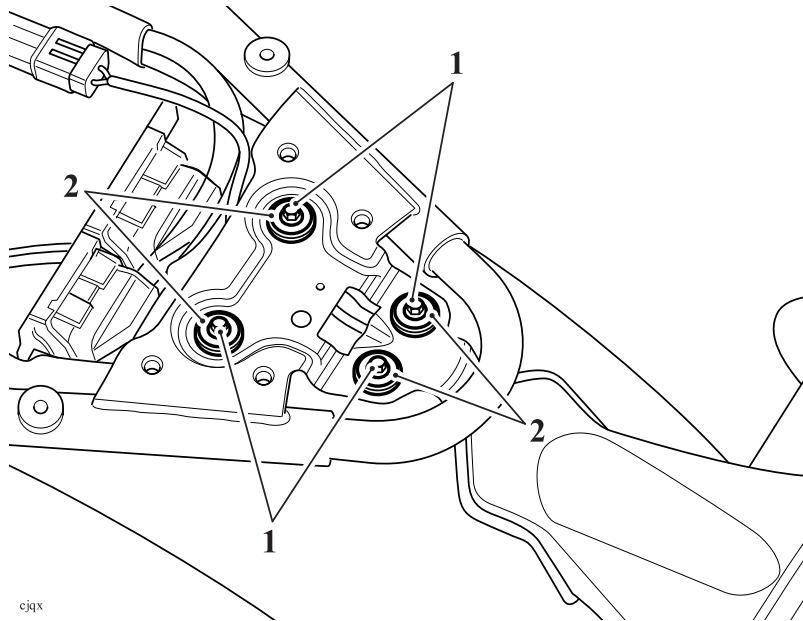

- 1. Fixings
- 2. Shouldered washers