

Headlight and Daytime Running Light Bulb Replacement

WARNING

The bulbs become hot during use. Always allow sufficient time for the bulbs to cool before handling. Avoid touching the glass part of the bulb. If the glass is touched or gets dirty, clean with alcohol before reuse.

CAUTION

The use of non-approved headlight bulbs may result in damage to the headlight lens. Use a genuine Triumph supplied headlight bulb as specified in the Triumph Parts Catalogue. Always have replacement headlight bulbs installed by an authorised Triumph dealer.


- Remove the seat (see [Seat - Removal](#)).
- Disconnect the battery, negative (black) lead first (see [Battery - Removal](#)).

Daytime Running Lights

The daytime running lights (DRL) are situated within the headlight assembly and are sealed, maintenance free LED units.

Headlight Bulb


1. Release the two fixings and detach the headlight from the headlight bowl.

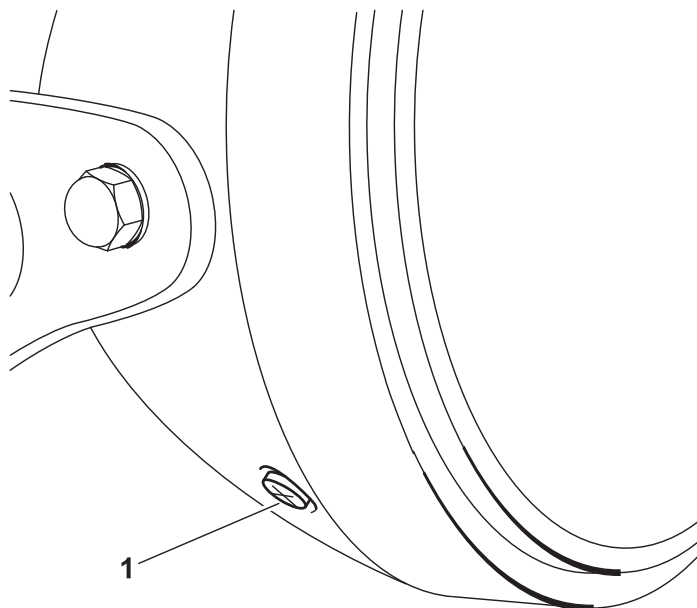

1. Headlight fixing (one of two)

2. While supporting the light unit, disconnect the multipin electrical connector from the headlight bulb and the electrical connector for the daytime running light from the main harness.

3. Remove the rubber dust cover.
4. Unhook the headlight bulb's wire retainer.
5. The headlight bulb can now be removed.

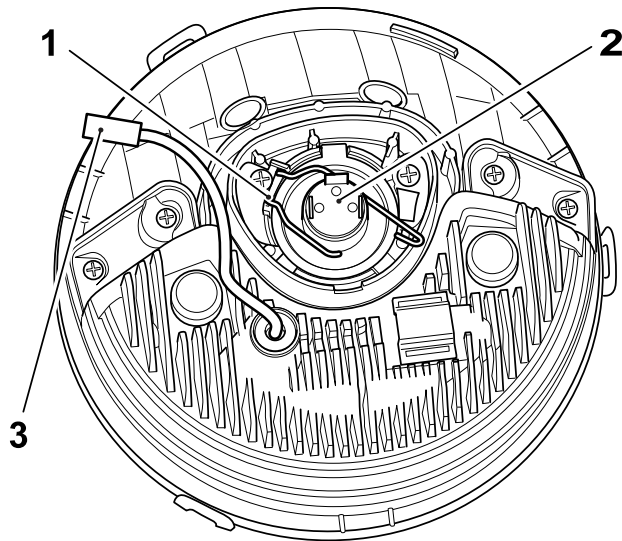

cizx_2

1. **Wire retainer**
2. **Headlight bulb**
3. **DRL harness**

6. Installation is the reversal of removal.