


Evaporative Canister (if fitted) - Installation

WARNING

Before starting work, ensure the motorcycle is stabilised and adequately supported. This will help prevent it from falling and causing injury to the operator or damage to the motorcycle.

1. Position the evaporative canister to the motorcycle and connect the two hoses to the left hand side of the evaporative canister as noted for removal.

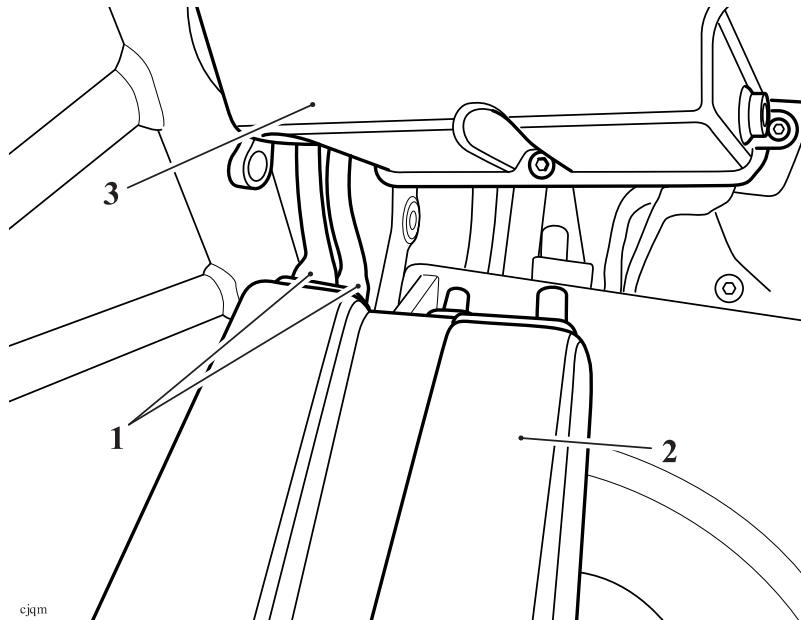

1. Hoses
2. Evaporative canister
3. Airbox

2. Fit the evaporative canister to the motorcycle, ensure the locating lug on the left hand side locates into its hole in the airbox grommet.
3. Align the right hand side to the air box, fit the fixings and tighten to **1.4 Nm**.
 - Refit the rear wheel (see [Rear Wheel - Installation](#)).